
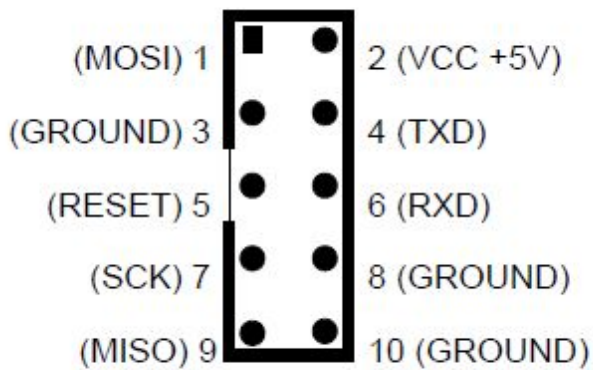


USBASP AVR Programmer

Pinouts:

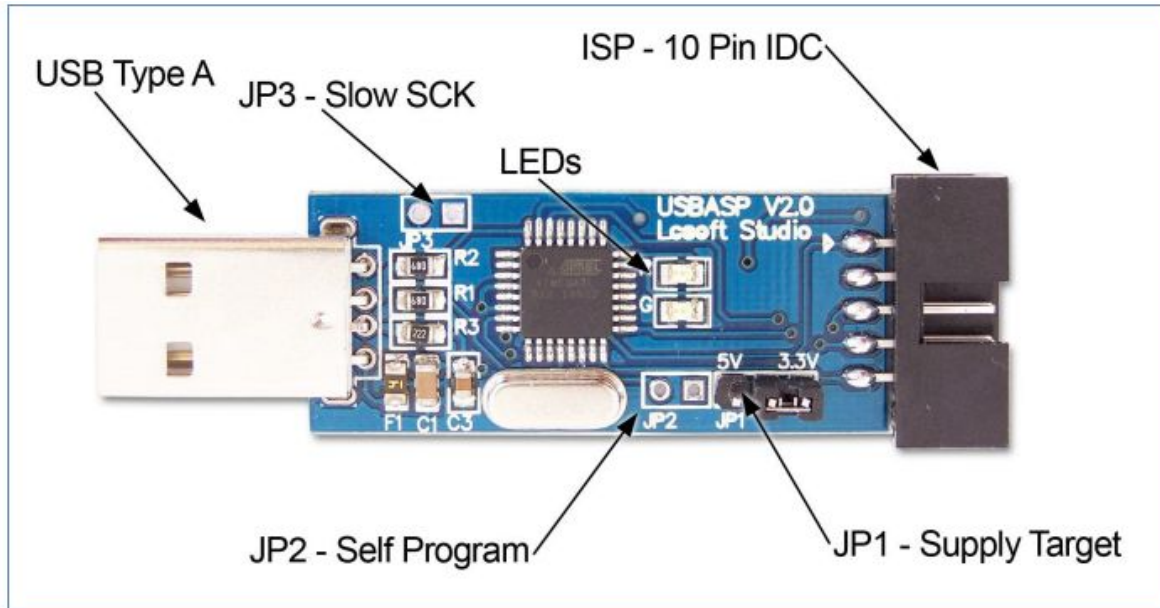

USBasp:

10 pin IDC

- 1).....MOSI
- 2).....VCC (5V/3.3V via JP1)
- 3).....GND
- 4).....TXD
- 5).....RESET
- 6).....RXD
- 7).....SCK
- 8).....GND
- 9).....MISO
- 10).....GND

JP1:

Target power supply jumper. Selects between 3.3V and 5V power supply to target board.

JP2:

Self programming mode. Short to reprogram USBasp firmware

JP3:

Slow clock mode. Short if target clock is lower than 1.5MHz

R LED:

Illuminated when programming device.

G LED:

Power indicator.

