


D2-6 trolley program download method

D2-6 car using the single-chip model STC5W201S, the corresponding program to download the software is stc-isp, in this car information in the file name "stc-isp-15xx-v6.85H.exe"

Download program requires a USB to TTL module, common modules are CP2102, CH340, PL2303 and so on. (Package does not includes)

Serial port module and D2-6 car J2 port connection, only need to connect three DuPont lines, VCC do not have to connect.

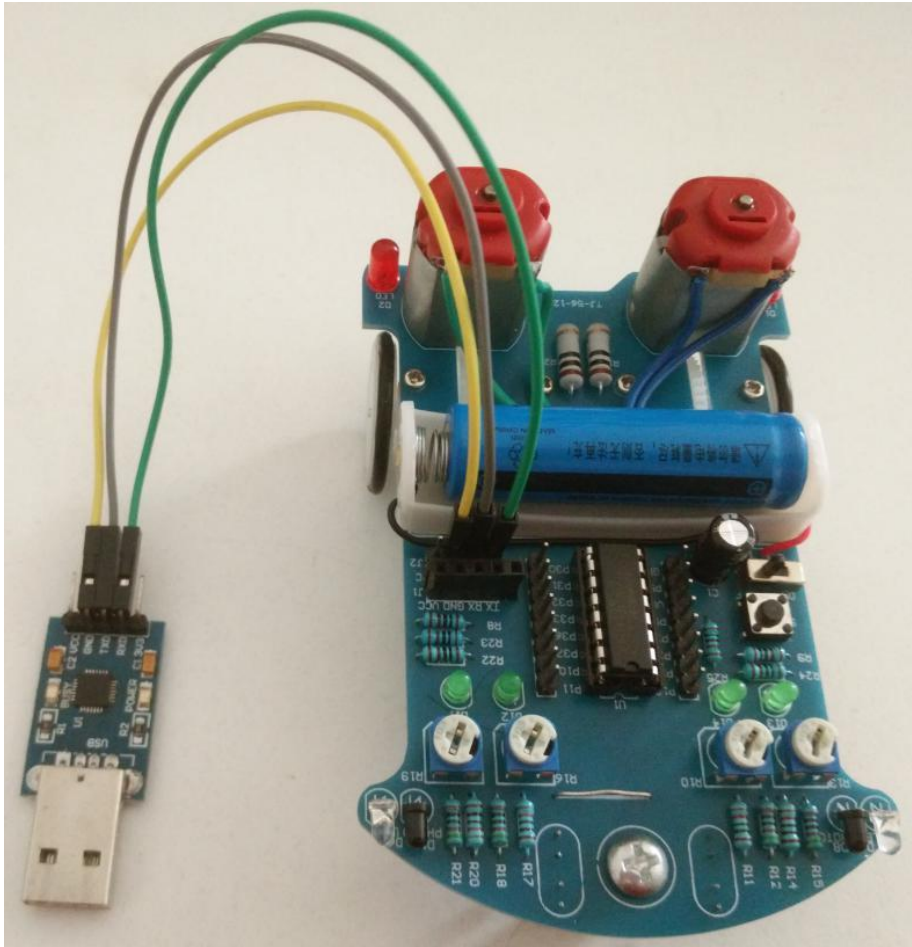

Serial port module and D2-6 trolley connection

GND -----> GND

RX -----> TX

TX -----> RX

After the battery is connected, the power switch S1 is turned off.

Serial module plug into the computer USB interface, if you do not install the serial port module driver, then install the driver and then insert the module.

Open the STC-ISP software (CN version only, maybe you can use your own version of the software)



5. Click the "Download / Program" button to open the D2-6 power switch S1. Wait for the download to finish

