


Bluetooth module installed in the car's J1 interface, J1 is a four-pin socket, please pay special attention to the direction of Bluetooth module, do not reverse it.

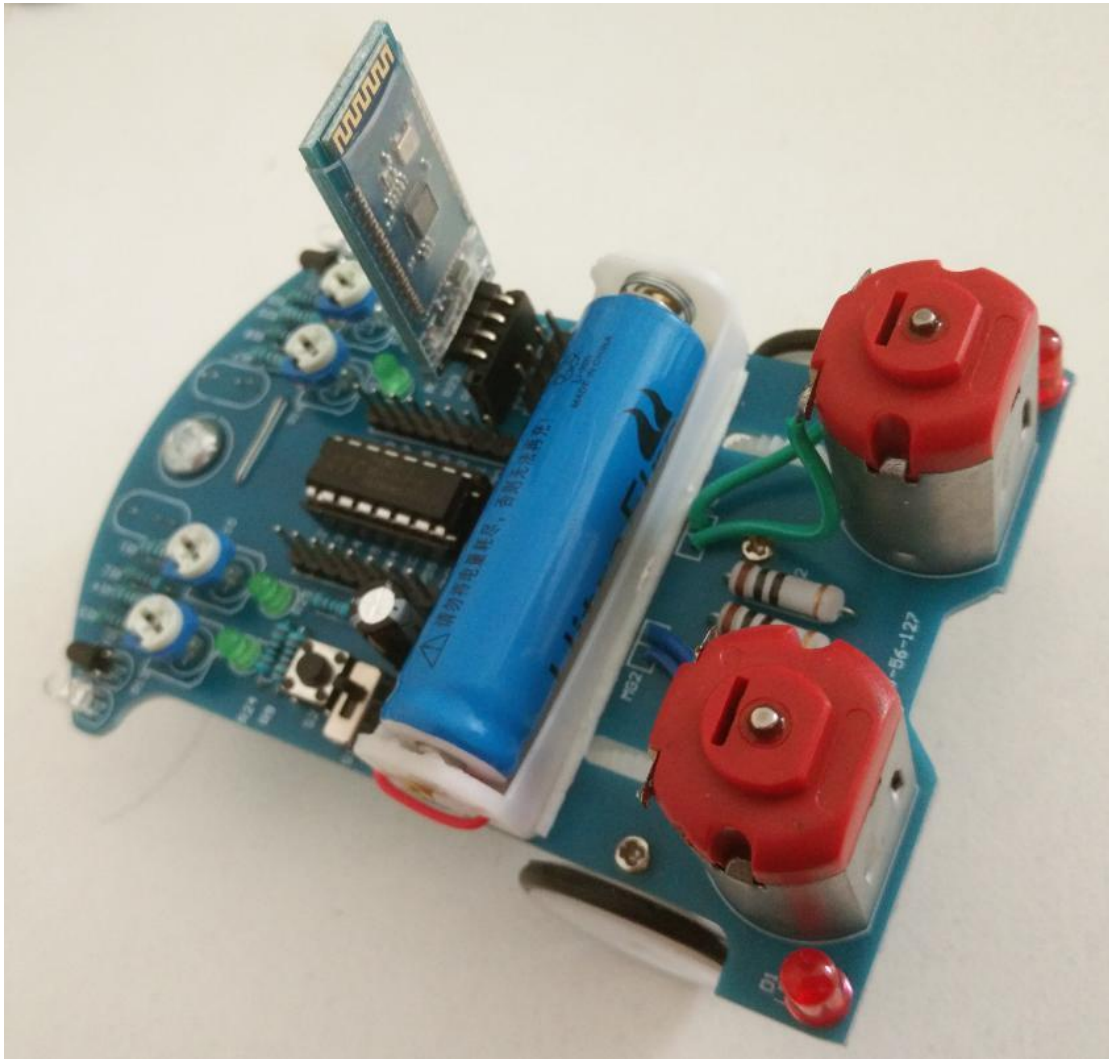

When the Bluetooth module is powered on, if there is no connection with the host computer, the indicator on the module is flashing. When the connection is connected, the indicator on the module is on.